



Touch-Free Dispenser Floor Stand

ASSEMBLY INSTRUCTIONS

3611 St. Johns Bluff Rd. South, Suite 1
Jacksonville, FL 32224
1-800-638-2625 :: www.hlk.cc



STEP 1.

Place pole without recessed end into the base and secure by pushing in the button on the stand lining it up with the hole on the pole. Insert the pole into the base until the button snaps into place.


STEP 2.

Place recessed pole end into pole already attached to the base. Secure by pushing in the button on the stand lining it up with the hole on the pole. Insert the pole into the base until the button snaps into place.



STEP 3.

Mount backing with dispenser on it the top pole. Then secure by pushing in the button on the stand lining it up with the hole on the pole.

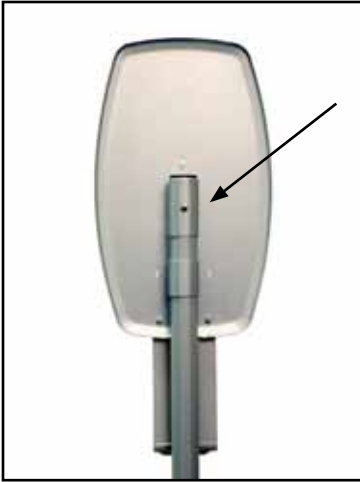

STEP 4.

Line hole and button up. Push button in and slide on top pole until the button securely is in the hole. Make sure that the button is secure in the hole on the stand as shown in the picture.

STEP 5.

Use key provided to open the dispenser to replace batteries or replace 800 ml. GBG bag-in box.

